

InGaAs PIN photodiode

G8370-10

Ceramic package with large active area ($\phi 10$ mm)

Features

- Large active area: $\phi 10$ mm
- High sensitivity: 0.95 A/W Typ. ($\lambda=1.55$ μm)
- Low dark current
- Low PDL: 5 mdB Typ., 10 mdB Max.
- Photo response non-uniformity: ± 2 % Typ.

Applications

- LD power monitor
- LD aging equipment

■ General / Absolute maximum ratings


Parameter	Symbol	Value	Unit
Active area	-	$\phi 10$	mm
Reverse voltage	V_R Max.	1	V
Operating temperature	$T_{opr.}$	-25 to +70 *	$^{\circ}\text{C}$
Storage temperature	$T_{stg.}$	-25 to +70 *	$^{\circ}\text{C}$

* No condensation

■ Electrical and optical characteristics ($T_a=25$ $^{\circ}\text{C}$)


Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Spectral response range	λ		-	0.9 to 1.7	-	μm
Peak sensitivity wavelength	λ_p		-	1.55	-	μm
Photo sensitivity	S	$\lambda=1.3$ μm	0.8	0.85	-	A/W
		$\lambda=\lambda_p$	0.85	0.95	-	A/W
Dark current	I_D	$V_R=10$ mV	-	0.2	2	μA
Shunt resistance	Rsh	$V_R=10$ mV	5	50	-	$\text{k}\Omega$
Terminal capacitance	C_t	$V_R=0$ V, $f=1$ MHz	-	20	-	nF
Cut-off frequency	f_c	$V_R=0$ V, $R_L=50$ Ω	-	100	-	kHz
Noise equivalent power	NEP	$\lambda=\lambda_p$	-	6×10^{-13}	-	$\text{W}/\text{Hz}^{1/2}$
Detectivity	D^*	$\lambda=\lambda_p$	-	1.5×10^{12}	-	$\text{cm}\cdot\text{Hz}^{1/2}/\text{W}$
Photo response non-uniformity	PRNU	80 % of active area	-	± 2	-	%
PDL	-	$V_R=0$ V, $\lambda=1.55$ μm	-	5	10	mdB

■ Spectral response

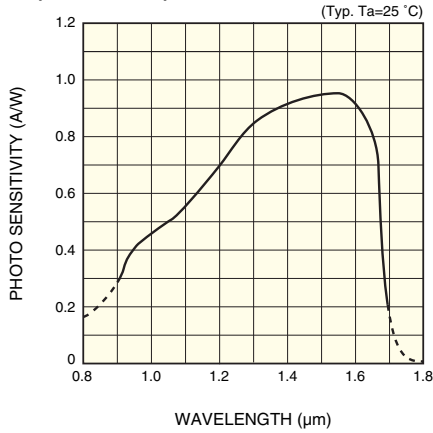


KIRDB0284EA

■ Dark current vs. reverse voltage

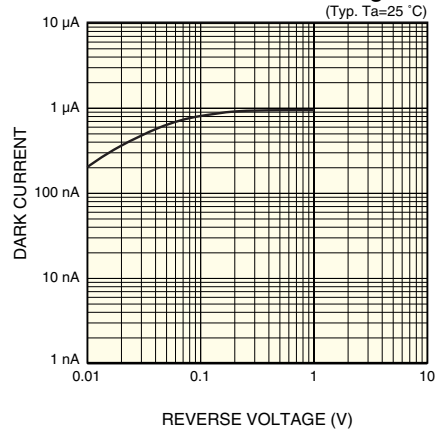


KIRDB0285EA

■ Terminal capacitance vs. reverse voltage

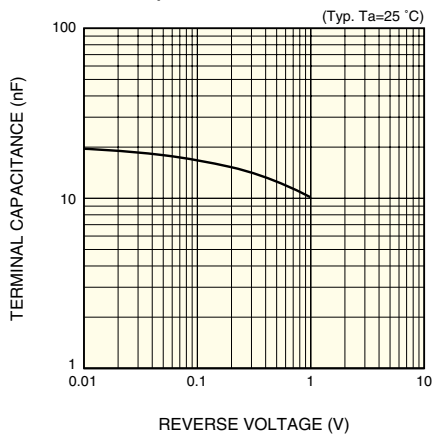

KIRDB0286EA

■ Dimensional outline (unit: mm)

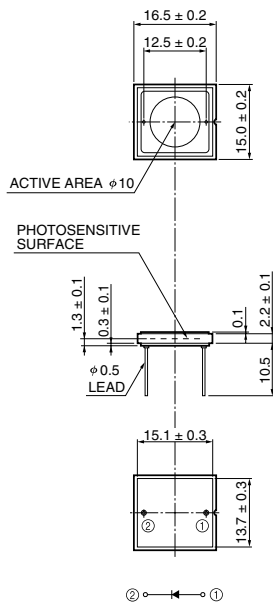

KIRDA0167EA

HAMAMATSU

Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2004 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Hamamatsu City, 435-8558 Japan, Telephone: (81) 053-434-3311, Fax: (81) 053-434-5184, <http://www.hamamatsu.com>

U.S.A.: Hamamatsu Corporation, 360 Foothill Road, P.O.Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 08152-3750, Fax: (49) 08152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Smidsvågen 12, SE-171 41 Solna, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39) 02-935-81-733, Fax: (39) 02-935-81-741